

inca[®]

PowerBank Dual Output 10,000mAh

Retractable Lightning 8-pin & Micro-USB cords
User Instructions



PRODUCT NUMBER: IPWRBK10K

Includes:



1 x INCA Dual Output PowerBank
- Push & Twist to return cords -



1 x USB Charging Cable



inca[®]
adeal.com.au

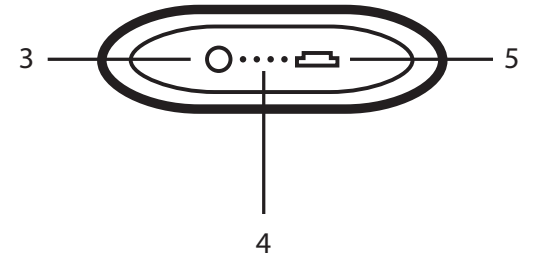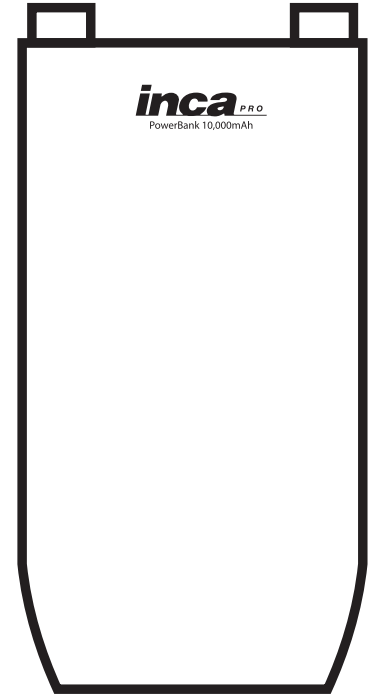

1. Lightning 8-pin output 2. Micro-USB output
3. Power switch 4. Capacity LED Indicator
5. USB charger input

INCA POWERBANK 10,000mAh

Product number: IPWRBK10K

Before using this PowerBank, please read these user instructions.

This device is a high powered 10,000mAh charger with built in retractable micro USB and Lightning 8-pin charging cords.

Product Features:

- Dual outputs: micro-USB & Lightning 8-pin
- Charge two devices simultaneously
- Internal Twist Retractable “carry anywhere” charger cords
- LED charging indicator
- Lithium Polymer Battery – long life and fast re-charge
- Slim line “pocket style” design
- Suitable for High Capacity Devices
- Charges most tablets and smartphones
- Overcharge Protective Circuit Board (PCB) built in
- USB input charging cord included

The PowerBank is fully charged when all 4 LED indicators are lit, each LED represents 25% of total capacity.

OPERATING INSTRUCTIONS

How to charge INCA PowerBank

- Fully charge before first use -

Please charge via a compliant branded AC/DC charger with supplied micro-USB cable. The LED lights indicate percentage of charge with 4 LEDs indicating fully charged and 1 LED indicating low charge. All 4 LEDs will light up when fully charged.

How to charge a device

- Pull out and extend the retractable charging cord required to suit the device to be charged
- Plug the micro or 8-pin connector into your specific device and press the power button for 1-3 seconds to starting charging.
- Press the power button for 1-3 seconds to turn off the PowerBank or unplug to stop charging.
- To retract the charger cord into the device, use a push and twist motion to allow the cord to fully return into the PowerBank case

How to check the remaining capacity of the PowerBank

- Press the power button on the PowerBank
- The 4 LED indicators will light up individually to indicate remaining capacity
- Each LED light represents 25% of total capacity.
- All 4 LED indicators ON indicate the PowerBank is fully charged.

Important Safety Instructions:

- THIS IS NOT A TOY - Keep out of reach of children.
- Do not disassemble, there are no serviceable parts enclosed
- Store PowerBank in a cool and dry place.

- DO NOT Exposure to rain, Humidity, liquids or moisture.
- Do not store PowerBank in a hot or humid environment. High temperatures can shorten the life span of electronic devices, damage batteries and warp or melt plastic parts.
- Do not dispose of PowerBank in fire.
- If PowerBank is not used for a long time, please charge and discharge once every three months to prolong battery life.
- DO NOT leave the PowerBank connected to a device or charger for prolonged periods, once device or PowerBank is charged disconnect the cables
- Please only use a certified brand name USB charger to charge the PowerBank. Do not use defective power chargers.
- Disconnecting the charger once charging is complete for safety, and, will preserve the battery life.

Dimensions	135 x 73 x 20.8mm
Weight	228g
Compatibility	Smart Phone, Tablet, Other USB devices
Battery capacity	Li-Polymer 10,000 mAh
Output	DC 5V/2.1A
Input	DC 5V0.5-1.8A

Warranty Service

For further information, please visit our website adeal.com.au