

## **Wired Remote**

Shutter release

PH10420 N8 fits DC0 plug  
PH10430 N10 fits DC2 plug  
PH10440 C6 fits E3 or L1 plug  
PH10450 C8 fits N3 plug  
PH10460 S6 fits S1 plug  
PH10461 S8 fits S2 plug



A compact remote switch which operates all functions of the camera's shutter release button. Particularly important to avoid camera movement, making it convenient and easy to use when taking long exposure photos.

Half press on the shutter button will cause the camera to focus, full press will trigger the shutter and cause the camera to take a photo. For long exposures, press the release button completely and slide it in the direction of the arrow to lock the button in the depressed position. To unlock the button, slide it back to its original position.

The length of cable is 1 meter.



[www.phottix.com](http://www.phottix.com)