



Compatibility Chart

S1 3" APERTURE FRAME	S2 3.2" APERTURE FRAME	S3 UNIVERSAL METAL PLATE	S4 16:9 METAL PLATE	S5 Multi-finder METAL PLATE	S6 UNIVERSAL METAL PLATE
		Universal	Only 16:9 wide screen	Mirrorless and compact bodies may not work	Battery grip not compatible

Canon	1DX	x	✓	✓	x	✓	x
	5DIII / 5DS / 5Dsr	x	✓	✓	x	✓	✓
	5D II	✓	x	✓	x	✓	✓
	5D IV	x	✓	✓	x	✓	✓
	6D	✓	x	✓	x	✓	✓
	7D II	✓	x	✓	x	✓	✓
	7D	✓	x	✓	x	✓	✓
	60D	✓ (screen does not close)	x	✓	x	✓	✓
	70D/80D	✓ (screen does not close)	x	✓	x	x	✓
	77D	✓	x	✓	x	x	✓
	100D	✓	x	✓	x	✓	✓
	T3i/600D	✓ (screen does not close)	x	✓	x	✓	✓
	T5i / 700D / 750D / 760D / 800D	✓ (screen does not close)	x	✓	x	x	✓
	T5 / 1200D / 1300D	✓	x	✓	x	x	✓
	S110	✓	x	✓	x	x	✓
	EOS M / M3 / M5 / M6 / M10	x	x	✓	x	x	✓
	G15 / G16	✓	x	✓	x	x	✓
G1X	✓	x	✓	x	x	✓	



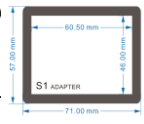 
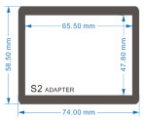 
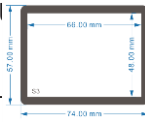 
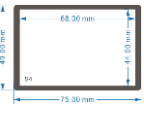 
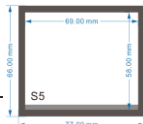 
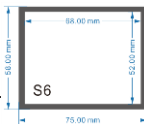 
Compatibility Chart

S1 3" APERTURE FRAME	S2 3.2" APERTURE FRAME	S3 UNIVERSAL METAL PLATE	S4 16:9 METAL PLATE	S5 Multi-finder METAL PLATE	S6 UNIVERSAL METAL PLATE
		Universal	Only 16:9 wide screen	Mirrorless and compact bodies may not work	Battery grip not compatible

Nikon	D3s	✓	x	✓	x	✓	x
	D4 / D4s	x	✓	✓	x	✓	x
	D5	x	✓	✓	x	✓	x
	D810	x	✓	✓	x	✓	✓
	D800 / D800E	x	✓	✓	x	✓	✓
	D600 / D610	x	✓	✓	x	✓	✓
	D750	x	✓	✓	x	✓	✓
	D700	✓	x	✓	x	✓	✓
	D7000	✓	x	✓	x	✓	✓
	D7100 / D7200	x	✓	✓	x	✓	✓
	D90	✓	x	✓	x	✓	✓
	D500	x	x	✓	x	✓	x
	D5200	✓ (screen does not close)	x	✓	x	✓	✓
	D3000 / D5500	x	x	✓	x	✓	✓
	D3100	✓	x	✓	x	✓	✓
	D3200 / D3300	x	x	✓	x	✓	✓
	D5300 / D5500	x	x	✓	x	✓	✓
	DF	x	✓	✓	x	✓	✓
	J2 / J3	✓	x	✓	x	x	✓
AW1	✓	x	✓	x	x	✓	



Compatibility Chart

		 S1 3"	 S2 3.2"	 S3	 S4 16:9	 S5	 S6
				Universal	Only 16:9 wide screen	Mirrorless and compact bodies may not work	Battery grip not compatible
SONY	A5000 / A5100 / A6000 / 6300	x	x	✓	✓	x	x
	NEX-7	x	x	✓	✓	x	x
	NEX-6	x	x	✓	✓	x	x
	NEX-5R	x	x	✓	✓	x	x
	A7 / A7 II / A7S II / A7R II	x	x	✓	x	x	✓
	RX100 / II / II I / RX1 / RX 10 /	x	x	x	x	x	✓
	HX30	✓	x	✓	x	x	✓
	A99	✓	x	✓	x	x	✓
	A77 II	x	x	✓	x	x	✓
	A58	✓	x	✓	x	x	✓
A99 II	x	x	✓	x	✓	✓	



Compatibility Chart

		S1 3" APERTURE FRAME	S2 3.2" APERTURE FRAME	S3 UNIVERSAL METAL PLATE	S4 16:9 METAL PLATE	S5 Multi-finder METAL PLATE	S6 UNIVERSAL METAL PLATE
				Universal	Only 16:9 wide screen	Mirrorless and compact bodies may not work	Battery grip not compatible
FUJIFILM	X-T1	√	x	√	x	x	√
	X-100S	√	x	√	x	x	√
	X-M1	√	x	√	x	x	√
	X-E2	√	x	√	x	x	√
	GFX-50S	x	x	√	x	√	x
	X-100F / X100T	x	x	x	√	x	x
Leica	M	√	x	√	x	x	√
	V-LUX4	√	x	√	x	x	√
	D-LUX 2	√	x	√	x	x	√
	D-LUX 6	√	x	√	x	x	√
OLYMPUS	E-M1 / E-M10 / E-M5 Mk II	√	x	√	x	x	√
	E-P5	√	x	√	x	x	√
	EM1 II	x	x	√	√	x	√
	EM10 II	x	x	√	√	x	√
	EM5 II	x	x	√	√	x	√
Panasonic	GF-5	√	x	√	x	x	√
	LX-5	√	x	√	x	x	√
	LX-7	√	x	√	x	x	√
	GH5	x	x	√	√	x	√